

GEN3 PREMIUM CHARGING HANDLE

PRO & ELITE INSTALLATION INSTRUCTIONS

MUST BE ASSEMBLED AND DISASSEMBLED WHILE SLIDES IS ON PACKAGE INCLUDES

STEP 1

Make sure that your magazine is removed from the pistol, the chamber is empty, your firearm is cleared and no ammunition is present.

- Elite or Pro Charging Handle Lever
- Metal Charging Handle Back Plate
- 2.5 mm Allen Wrench Tool



STEP 2

While pulling the slide to the rear, push upwards on the **SLIDE TOP LEVER (A)** (Slide release) to lock the slide to the rear.

STEP 3



Looking at the underside of the slide you will see a small plastic **"CUP" (B)** on the striker.

STEP 4

Insert the Allen Wrench in the gap where the **"CUP" (B)** is located. Make sure that you hold the **EXTRACTOR (C)** in its place while slowly pushing down (1) the **"CUP" (B)** using the Allen Wrench. This takes the pressure off of the spring that presses on the back of the plate.

STEP 5

Slowly remove the **SLIDE COVER PLATE (D)** while securing the parts under with your thumb. Please note that they are under spring tension. Work slowly to ensure you do not lose them.

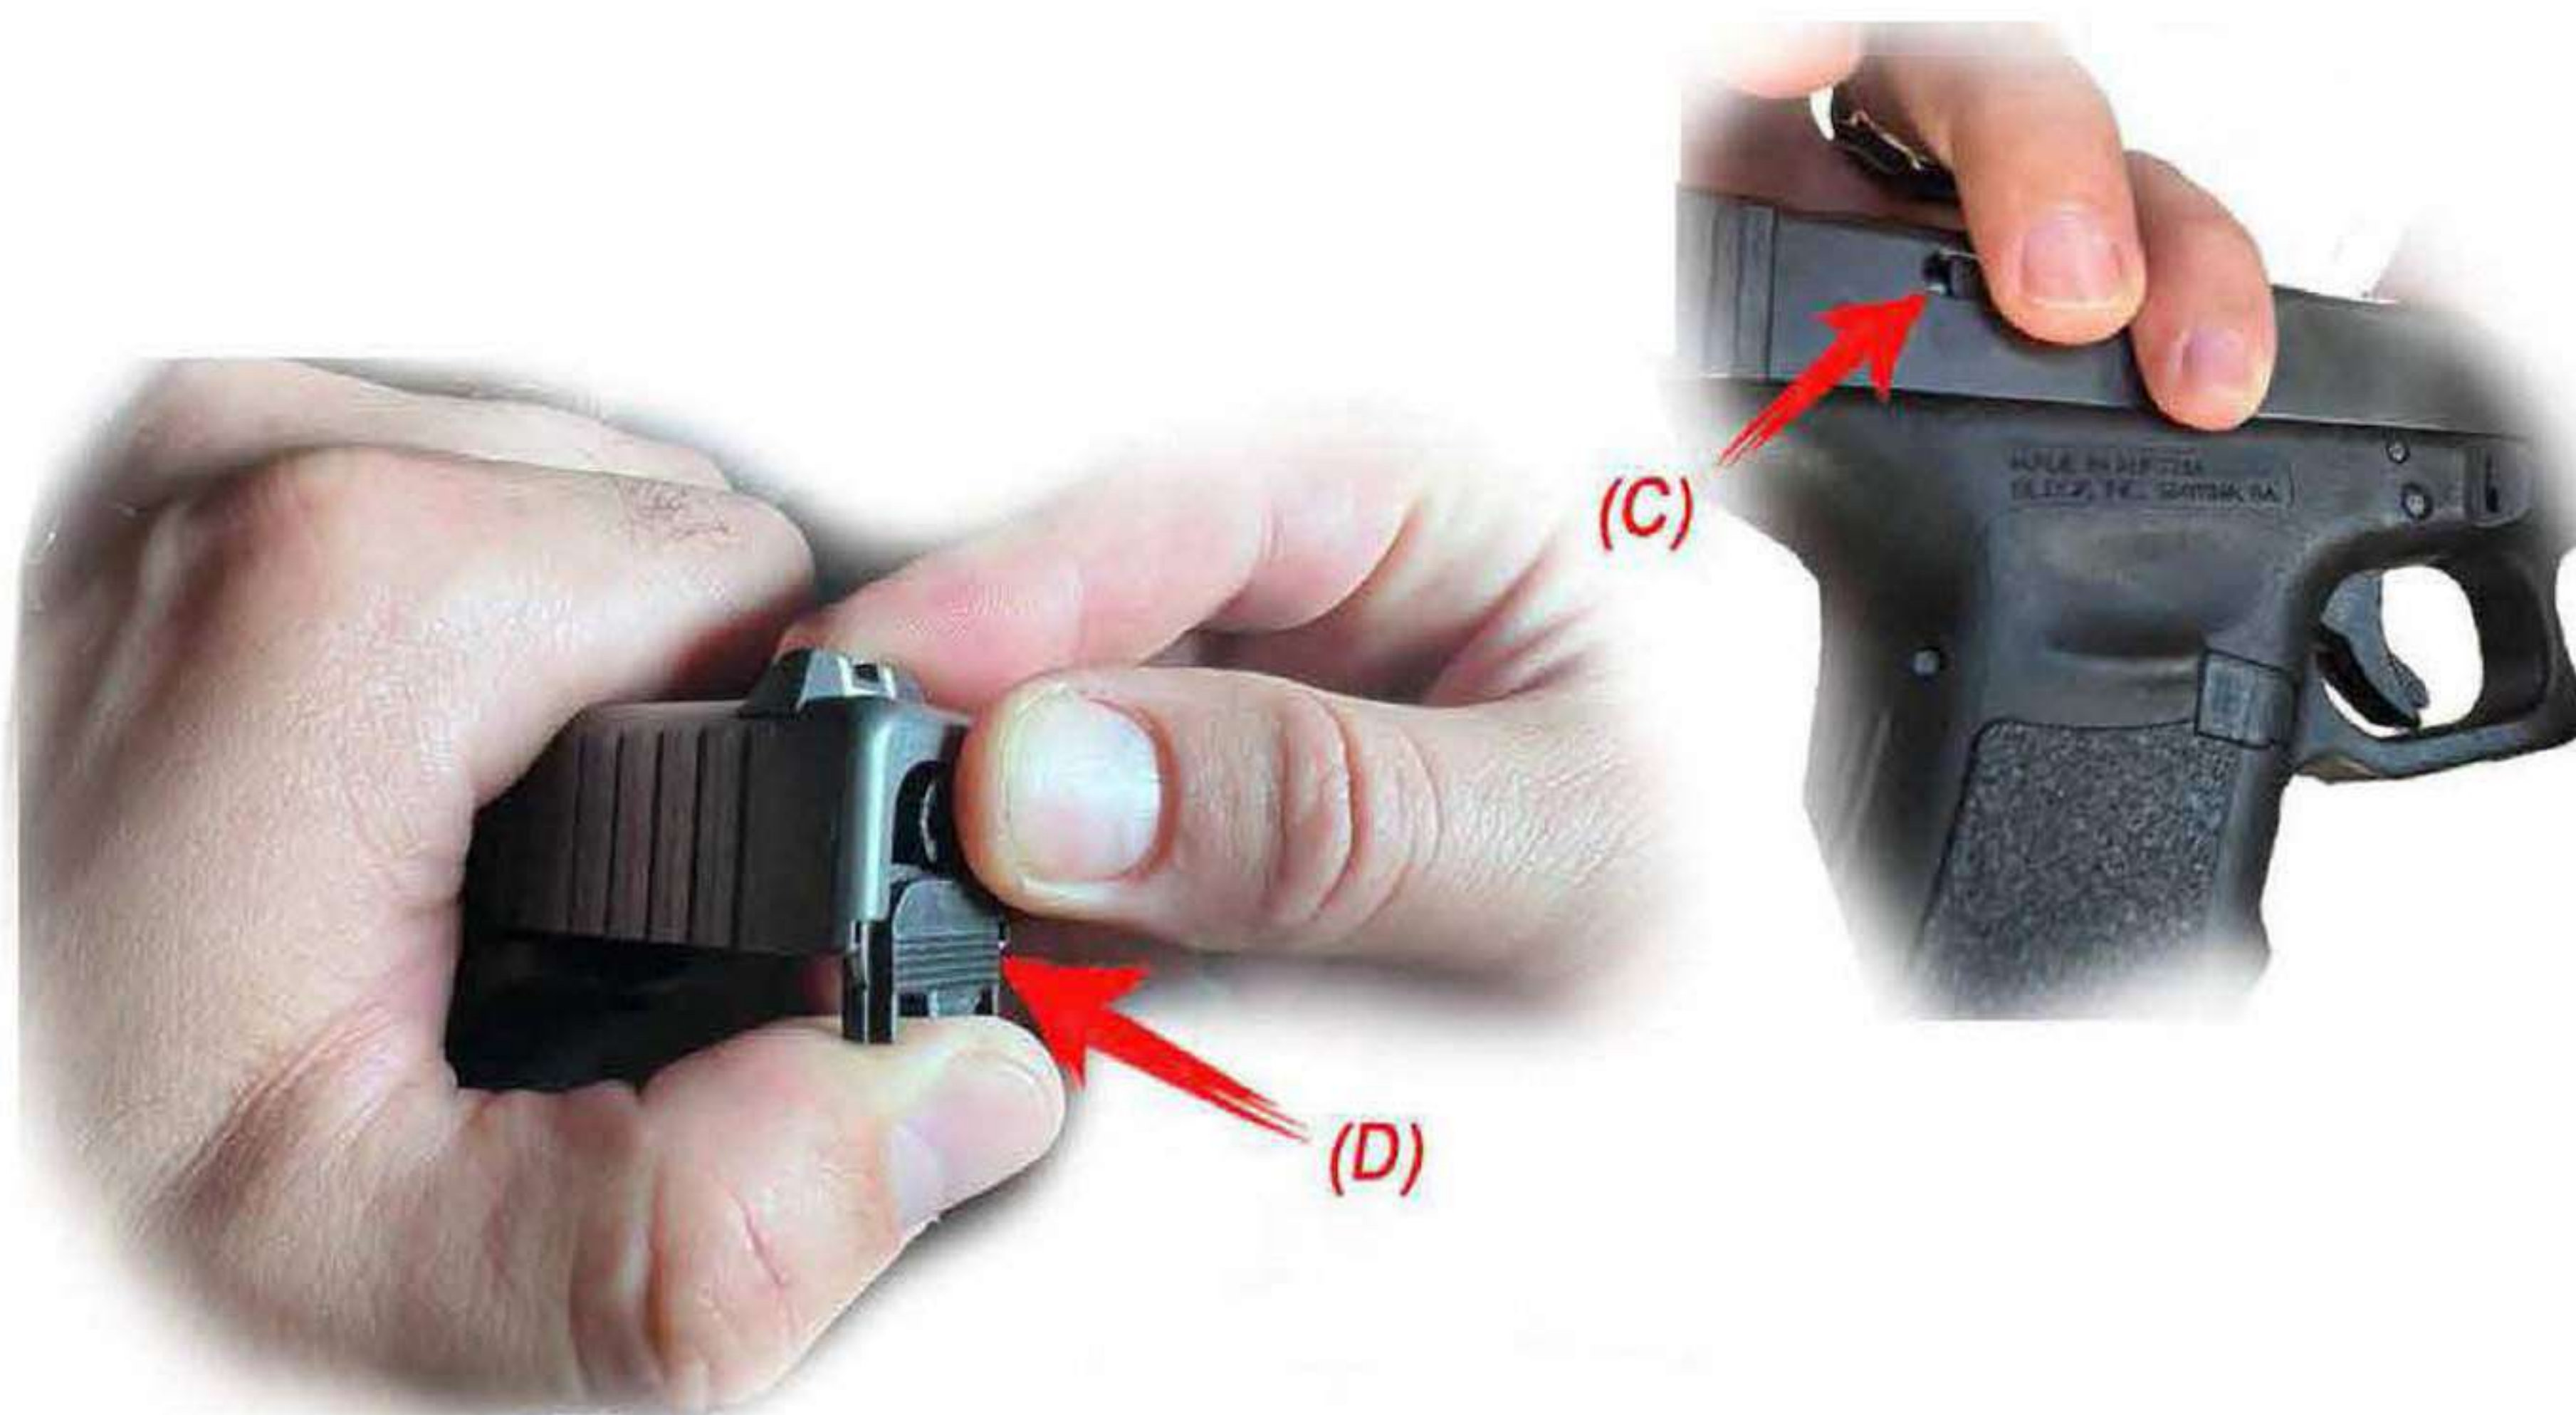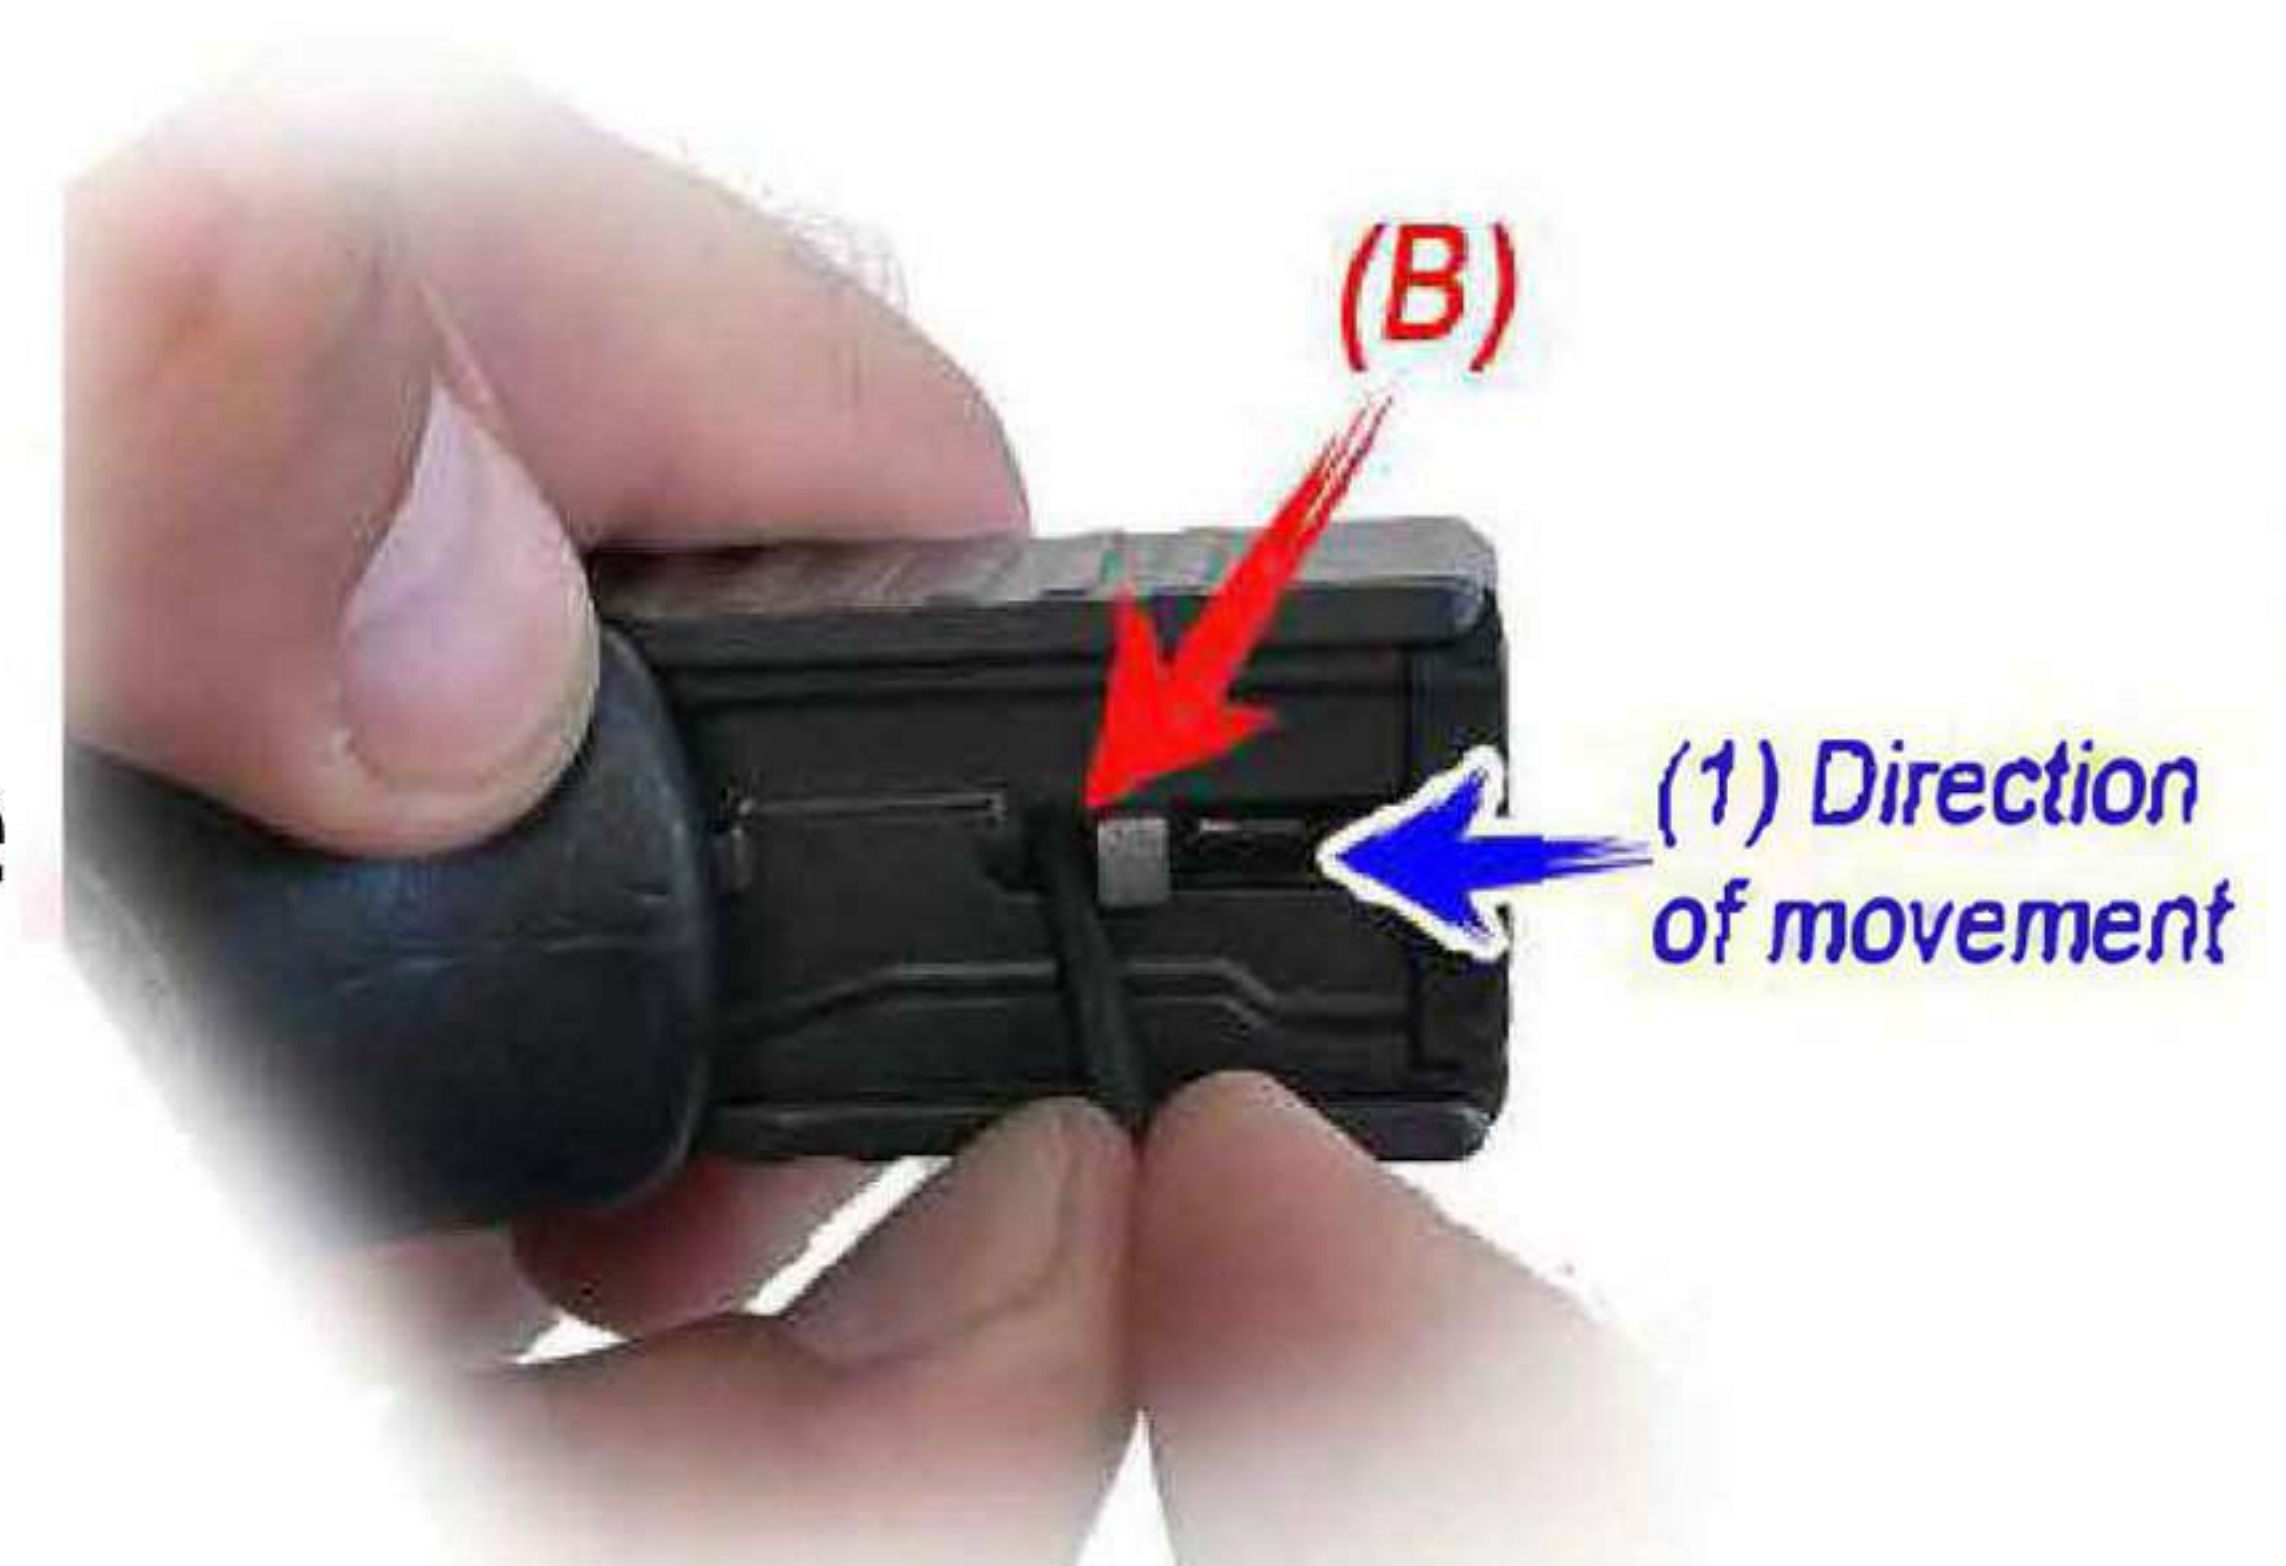

GEN3 PREMIUM CHARGING HANDLE


CHARGING HANDLE WILL FIT GENERATION 1,2 AND 3 MCKs.
CAN BE USED WITHOUT THE MCK TO ASSIST IN CHARGING YOUR HANDGUN

INSERTING CHARGING HANDLE BACK PLATE

STEP 1 While holding the **EXTRACTOR (E)**, take the **CHARGING HANDLE BACK PLATE (F)** and start sliding it upwards (2) into the rear of the slide, press in the **FIRING PIN (G)** with the Allen Wrench and keep sliding the **CHARGING HANDLE BACK PLATE (F)** up, now press the **EXTRACTOR DEPRESSOR PLUNGER (H)** with the Allen Wrench in and slide the **CHARGING HANDLE BACK PLATE (F)** until it locks into place.

STEP 2 Make sure that the **CHARGING HANDLE BACK PLATE (G)** is attached correctly and not moving.

STEP 3 After inserting your firearm into the MCK, lock the gun door, fully insert the **CHARGING HANDLE (K)/(J)** left or right side and rotate it backward. Make sure that the handle is locked in place.

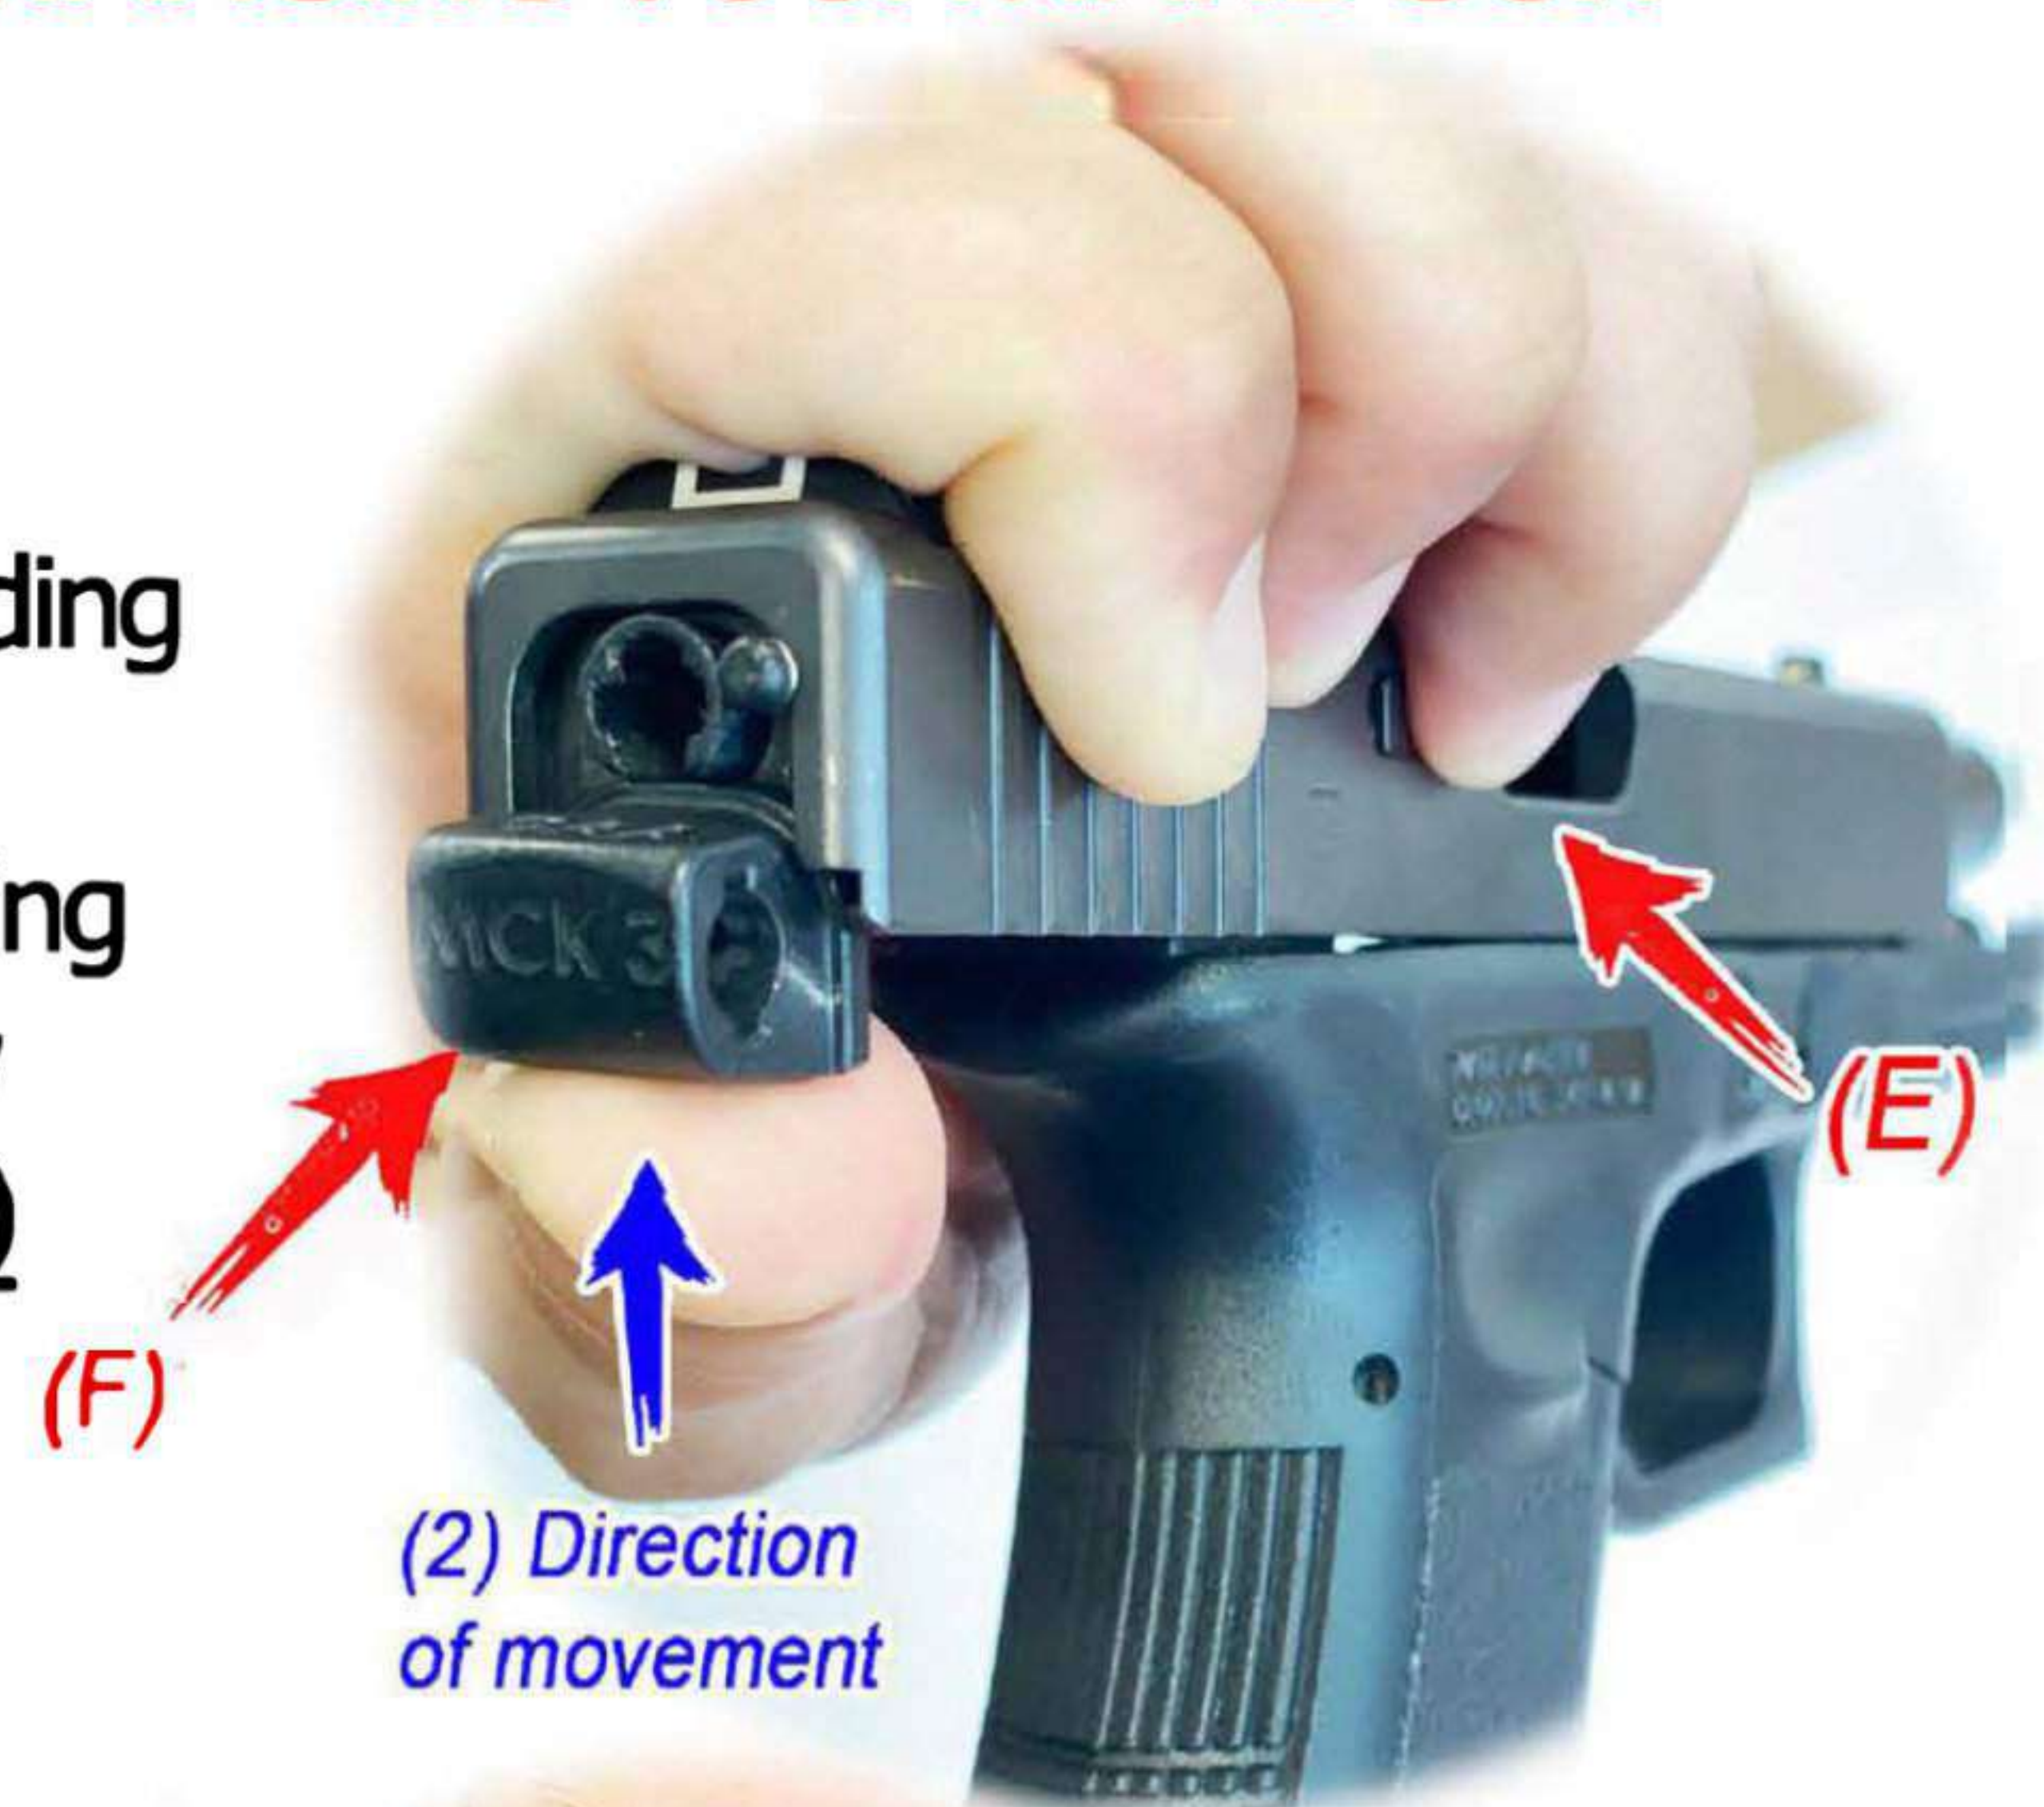

Locked position

GLOCK COMPATIBILITY

Glock 17/19/19X/20/21/22/23/24/25/26/27/28
/29/30/31/32/33/34/35/36/37/38/39/40/41/45 + P80

COMPATIBLE WITH GLOCK HANDGUNS GENERATION 1-5
NOT COMPATIBLE WITH THE GLOCK 42, 43, 43X, 44, 48.

