

MEPROLIGHT®

Quick Reference Guide

MEPRO FORESIGHT™

Augmented Weapon Sight

For enhanced functionality, download the "**Meprolight**" App from the Google play store or the Apple App store.


For instructional videos and the complete User Manual, scan the following QR code:



KIT CONTENT


Description	Qty
MEPRO FORESIGHT™ Sight	1
Cleaning kit	1
User manual	1
Cardboard box	1
Type-C USB cable (optional)	1

MAIN COMPONENTS

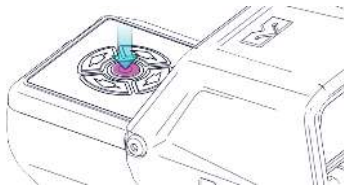



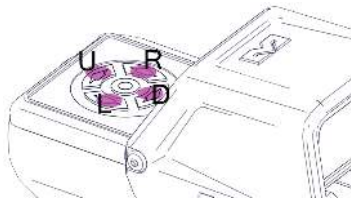


Keypad Select Button

Use this button to Power-up and Shut-down.



Keypad Navigation Buttons

Use the UP ; DOWN ; LEFT ; RIGHT  buttons to navigate between menu options.

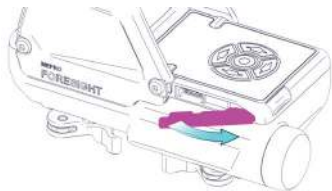


USB Charge Connector*


Pull the rubber cover to gain access to the USB (type-C) charge connector.

Connect the USB cable to a wall charger (5V) or a PC.

* Non-removable battery inside. To charge the device, use high-quality USB cable (type-c).

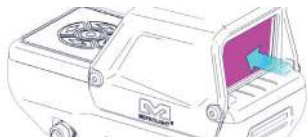


Shooter's-Side Lens

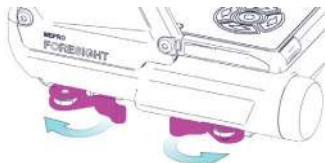


Mount Adapter

To mount on a weapon, first pull the levers outwards to the open position.


POWER ON/OFF

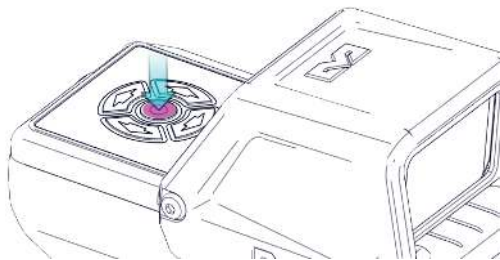


Power ON

Short press for 1 second the Center  button to power ON.

Menu Mode

Click on the Center  button to go to Menu Mode (see the last page).




 

Power OFF

Press and hold the Center  button for 3 seconds to power OFF.

Continue on the other side of the page




On-Screen Data

- 100%  Battery Status
-  Reticle
- 341°  Digital Compass
-  Roll Indicator
-  Bluetooth Connection


NOTE: Use the Meprolight® App to customize the on-screen data.

QUICK ADJUSTMENTS

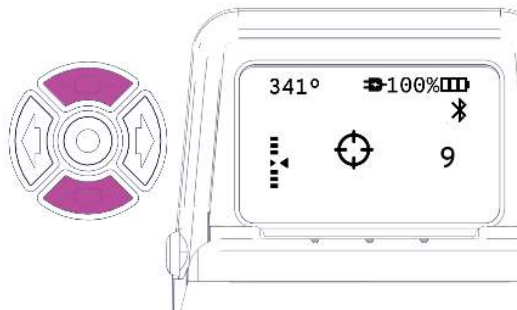

Display Brightness Adjustment


Adjust the Brightness by clicking the UP  and DOWN  buttons.

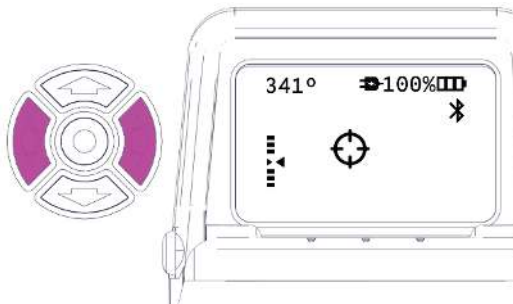






Five Pre-Set Reticles

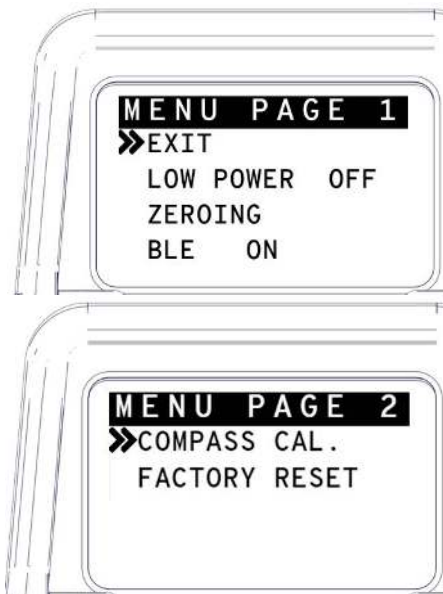

Change the Reticle pattern by clicking the LEFT ◀ and RIGHT ▶ buttons.

NOTE: Use the Meprolight® App to select from more than 20 user-selectable reticle styles.



MENU Mode

- Click the Select  button to toggle to the MENU MODE.
- Click the UP  and DOWN  buttons to navigate (choose) any of the menu options .
- Click the Select  button to select (enter/activate) a menuitem.
- To exit the Menu Mode, Select  the EXIT option.

NOTE: There are two pages in the MENU MODE (MENU PAGE 1/ MENU PAGE 2). To access PAGE 2, keep clicking the UP  or DOWN  buttons.



PO Box 26. 4 Ha'Hadas Street,
Or-Akiva Industrial Park ,
Or-Akiva 3065001, Israel.
Tel: + 972 4 6244111
Fax: + 972 4 6244123
email: sales@meprolight.com

Rev B, Jun. 2021, P.N. 558509000042