




USER MANUAL

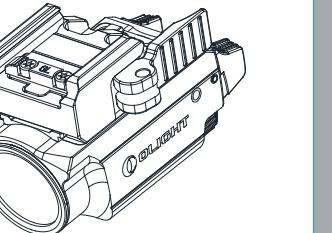

BALDR Mini

Thank you for purchasing this Olight Product. Please read this manual carefully before use and keep it for future reference!

COMPATIBILITY CHECK:

The BALDR Mini can be used on most Glock or Picatinny (mil-std-1913) type rails. The Glock adapter labelled "GL" is already installed and a Picatinny (mil-std-1913) adapter is included in the package. To install the light on Picatinny (mil-std-1913) rails, the user needs to replace the "GL" adapter with the included 1913 adapter using the screws and wrench provided in the package.

GREEN BEAM CALIBRATION:

Use the included hex wrench to rotate the adjustment screws on the side of the light to calibrate the vertical or horizontal angle of the green beam, and finally sight in the green beam for accurate use.


NOTE: A backup set of NYLOK adjustable screws is included.

- * The NYLOK cone point set screw is used for vertical angle calibration.
- * The NYLOK oval point set screw is used for horizontal angle calibration.




DANGER


- DO NOT throw the light directly into human eyes. This may cause temporary blindness, or permanent damage to the eyes.
- DO NOT charge this product with other charging cables except the one included in the original package.
- DO NOT cover the light head, or place the light head down on the ground when the light is on. The radiation energy of the light may cause damage to the light itself, or even result in burning to other materials.

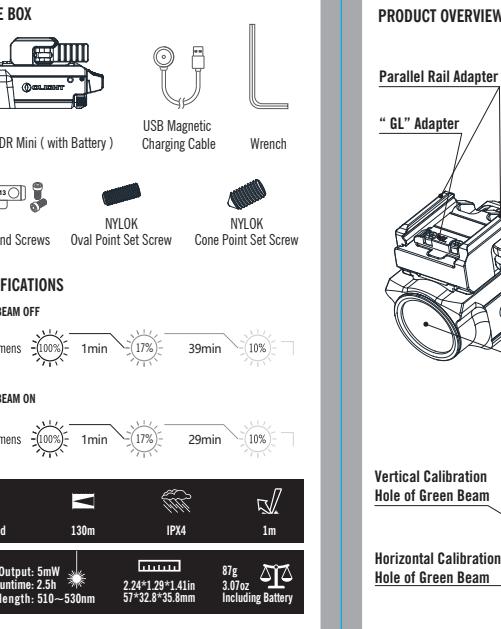

PRODUCT OVERVIEW

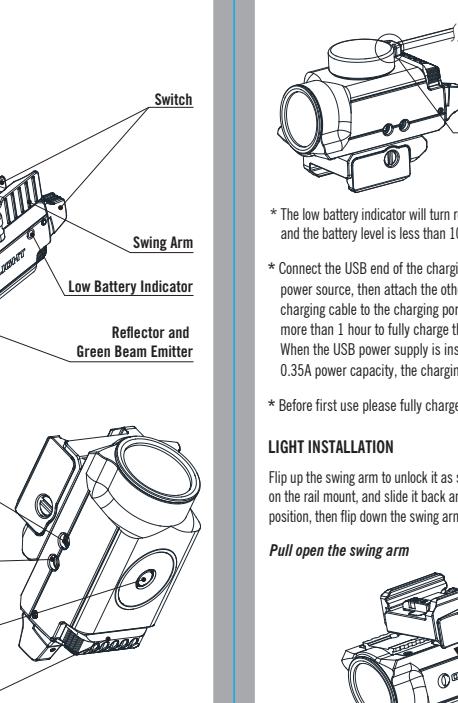

BEFORE FIRST USE

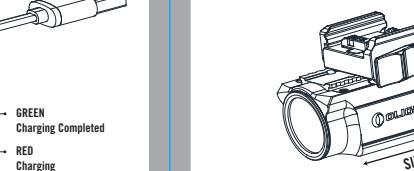

Slide the light to adjust the position



Close the swing arm



ICON

LIGHT

LIGHT SETTING

LIGHT&GREEN BEAM

ICON

GREEN BEAM

Vertical Calibration Hole of Green Beam

Horizontal Calibration Hole of Green Beam

Magnetic Charging Port

Light Setting Switch

Pull open the swing arm

Light

Setting

Switch

Light

Setting