

MEPROLIGHT® NIGHT SIGHT SYSTEM

ML-63201 MEPRO FT BULLSEYE FRONT for GLOCK Pistols

General Instructions

WARNING: This sight set contains a small quantity (54 millicuries or less) of radioactive tritium in gaseous form. No attempt must be made to disassemble the sights. If a sight is defective, please contact the distributor shown on the reverse side of this page for instructions – or, if outside the US, please contact your local distributor.

WARNING: Before starting, make sure the weapon is unloaded.

- Remove the slide assembly from the pistol. Follow the manufacturer's instructions for removal.
- Remove the old/stock sight/s from the slide in accordance with the manufacturer's standard procedures. Use a sight pusher if required.
- If you are unsure about the removal or installation of the sights or do not have the proper tools, contact a qualified gunsmith to perform the work.

Cleaning


- Use a suitable solvent (acetone or the like) to clean the following parts from any gun oil residue:
 - The slide assembly front and rear dovetail grooves.
 - The sight's contacting surfaces.

CAUTION: To prevent damage to non-metallic surfaces, do not use any cleaning solvents such as acetone on or around the sight dot area. Do not clean the sight with weapon lubricants or fuel. Do not immerse the sight in any fluid.

- Wipe all contacting surfaces clean and dry.

Rear Cover


- Apply LOCTITE® 609 threadlocker on both angled surfaces of the rear cover and on both angled surfaces of the slide's rear dovetail groove.
- Use a sight pusher to install the rear cover in the dovetail groove. Ensure that cover is in a centered position.
- Apply LOCTITE® 211 threadlocker on the rear screw.
- Use a 1 mm hex key to install the rear screw.

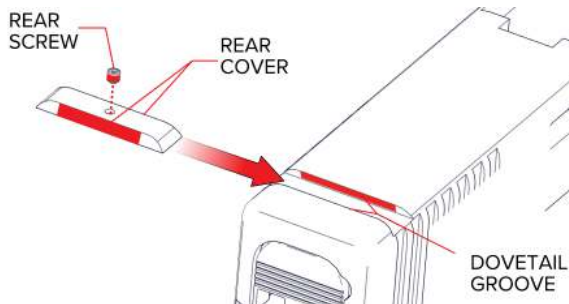

NOTE: Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the threadlocker.


MEPRO FT BULLSEYE FRONT Installation

- Completely fill the screw hole of the sight to the top with LOCTITE® 609 threadlocker.

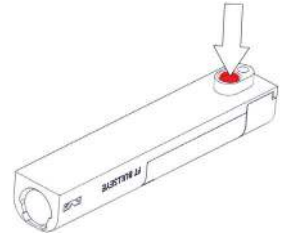

- Hold the slide upside down.
- Position the sight in its place on the slide. Position the sight such that the illuminated dot is facing the shooter. Hold the sight with your finger.
- Install the screw. Use a 3/16" socket driver to fasten lightly.
- Ensure that the sight is aligned and centered on the slide.
- Use a 3/16" socket driver to fasten the screw tightly.

NOTE: Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the threadlocker.

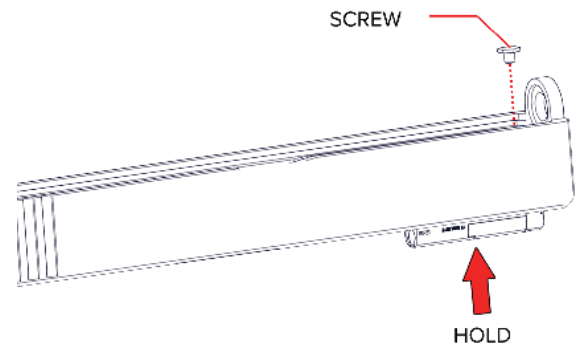

Aiming

Align the pistol towards the target. Target acquisition is achieved by viewing a dot in the middle of the circle at the sight's window. Make sure that the image of the circle is full and not disrupted.

Care and Maintenance of the Sight

Before shooting, make sure the aiming dot/s are clean. If necessary, wipe with a clean, dry cloth of soft cotton, rice paper or lens tissue.

NOTE: Do not use clothing fabric or other rough materials for cleaning.

MEPROLIGHT® SIGHTS

Made in Israel

Manufactured by:
Meprolight

"Registered Patent"
An ISO 9001 Quality Company
ISO14001 environment
OHSAS 18001 safety

For inquiries, please contact:

USA

e-mail: sales@meprolight.us
e-mail: support@meprolight.us
www.meprolight.us

International (Outside the USA)

e-mail: sales@meprolight.com
e-mail: support@meprolight.com
www.meprolight.com

Rev. B, Jul 2021, P/N: 812563201