

## MEPROLIGHT® NIGHT SIGHT SYSTEM

### ML-63225 MEPRO FT BULLSEYE FRONT for H&K VP9 Pistols

#### General Instructions

**WARNING:** This sight set contains a small quantity (54 millicuries or less) of radioactive tritium in gaseous form. No attempt must be made to disassemble the sights. If a sight is defective, please contact the distributor shown on the reverse side of this page for instructions – or, if outside the US, please contact your local distributor.

**WARNING:** Before starting, make sure the weapon is unloaded.

- Remove the slide assembly from the pistol. Follow the manufacturer's instructions for removal.
- Remove the old/stock sight/s from the slide in accordance with the manufacturer's standard procedures. Use a sight pusher if required.
- If you are unsure about the removal or installation of the sights or do not have the proper tools, contact a qualified gunsmith to perform the work.

#### Cleaning


- Use a suitable solvent (acetone or the like) to clean the following parts from any gun oil residue:
  - The slide assembly front and rear dovetail grooves.
  - The sight's contacting surfaces.

**CAUTION:** To prevent damage to non-metallic surfaces, do not use any cleaning solvents such as acetone on or around the sight dot area. Do not clean the sight with weapon lubricants or fuel. Do not immerse the sight in any fluid.

- Wipe all contacting surfaces clean and dry.

#### Rear Cover


- Apply LOCTITE® 609 threadlocker on both angled surfaces of the rear cover and on both angled surfaces of the slide's rear dovetail groove.
- Use a sight pusher to install the rear cover in the dovetail groove. Ensure that cover is in a centered position.
- Apply LOCTITE® 211 threadlocker on the rear screw.
- Use a 1 mm hex key to install the rear screw.

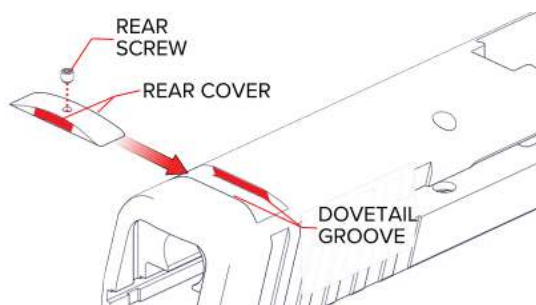

**NOTE:** Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the threadlocker.

#### MEPRO FT BULLSEYE FRONT Installation

- Apply LOCTITE® 609 threadlocker on both angled surfaces of the dovetail and on both angled surfaces of the slide's front dovetail groove.

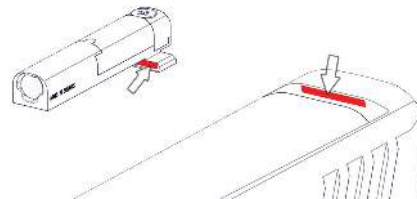


- Place the protective cover on the MEPRO FT BULLSEYE FRONT.
- Use a sight pusher to install the MEPRO FT BULLSEYE FRONT in the dovetail groove. Ensure that the sight is in a centered position.

**CAUTION:** Do not pound on the MEPRO FT BULLSEYE FRONT!



**NOTE:** Make sure that the installation procedure is made long before the threadlocker cures. After installation, allow a minimum of 8 hours for the thorough curing of the threadlocker.

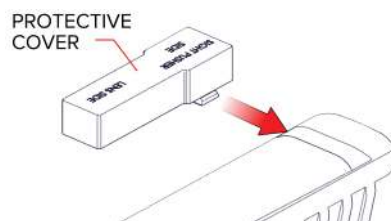

**NOTE:** Make sure to use the protective cover also when removing the MEPRO FT BULLSEYE FRONT.

#### Aiming

Align the pistol towards the target. Target acquisition is achieved by viewing a dot in the middle of the circle at the sight's window. Make sure that the image of the circle is full and not disrupted.

#### Care and Maintenance

Before shooting, make sure the aiming dot/s are clean. If necessary, wipe with a clean, dry cloth of soft cotton, rice paper or lens tissue.

**NOTE:** Do not use clothing fabric or other rough materials for cleaning.

## MEPROLIGHT®

### SIGHTS

Made in Israel

Manufactured by:  
Meprolight

"Registered Patent"

An ISO 9001 Quality Company  
ISO14001 environment

OHSAS 18001 safety

For inquiries, please contact:

**International** (Outside the USA)  
e-mail: [sales@meprolight.com](mailto:sales@meprolight.com)  
e-mail: [support@meprolight.com](mailto:support@meprolight.com)  
[www.meprolight.com](http://www.meprolight.com)

**USA**  
e-mail: [sales@meprolight.us](mailto:sales@meprolight.us)  
e-mail: [support@meprolight.us](mailto:support@meprolight.us)  
[www.meprolight.us](http://www.meprolight.us)

Rev. B, Jul 2021, P/N: 812563225